


# Proper Sizing for Insulating Rubber Gloves

---

**Measure the circumference of the palm as shown to determine the glove size.**

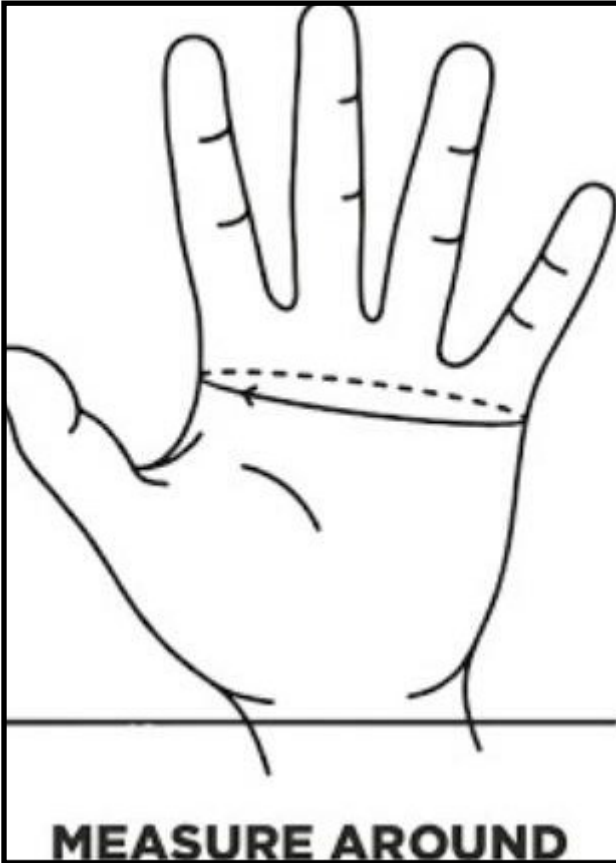

If you measure 9" in circumference around your palm, you are simply a size 9.

If you measure and arrive at a measurement that is not a whole number, such as 9-5/8" for example; you do not wish to have a half size, you simply round up to the nearest whole size.

Gloves are available in multiple classes, colors, lengths and sizes—including both full and half sizes (class dependent). Please call us if you have any questions or would like to check stock. You can also email us at [cs@cementexusa.com](mailto:cs@cementexusa.com) with questions, too.

***Cementex***

**The Safety Tool Specialists**